


Installing IR Receiver for Remote Control on PINE A64

Description

This is the overview on the installation of IR Receiver Diode to PINE A64 or Remote Control on PINE A64.

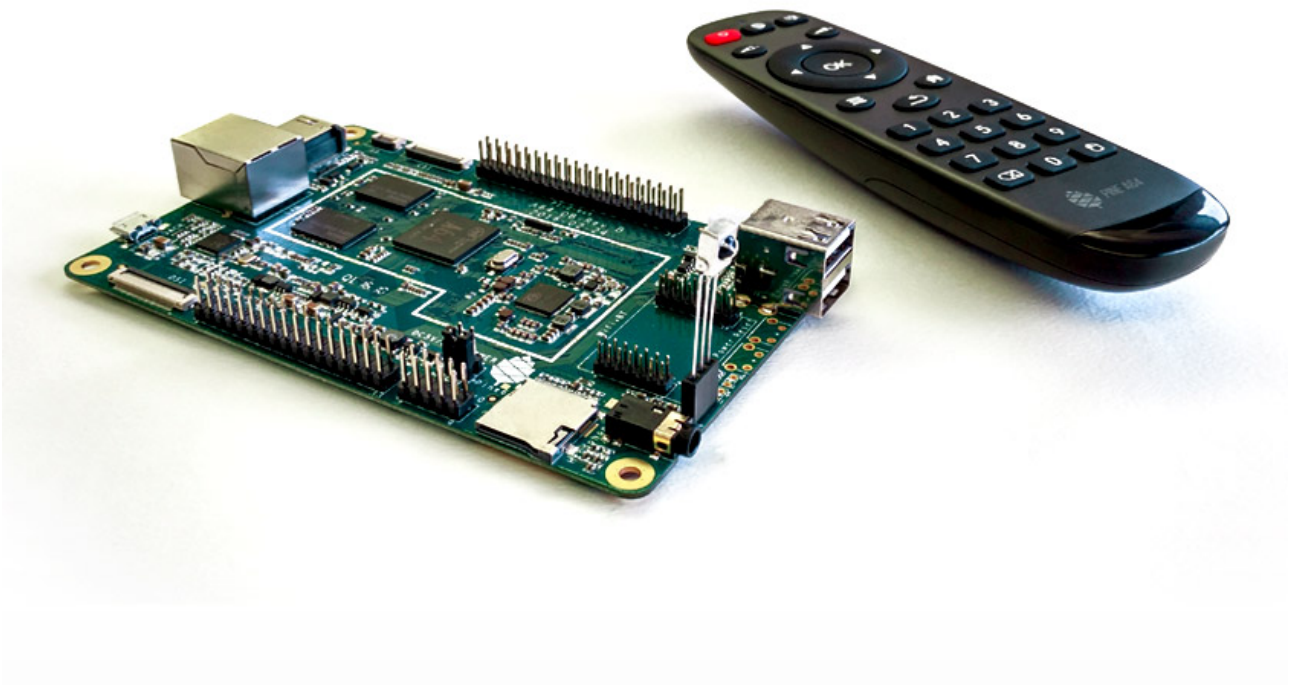

■ Packaging and Contents



Package Contents:

1 x IR Receiver Diode


1 x PINE A64 Remote Controller

Installing IR Receiver for Remote Control on PINE A64

Insert the 3 pins of the IR receiver into the female pin header on the PINE A64 (as shown below).



1. Make sure IR sensor is facing outward as shown in the images below.
2. Make sure the pin length is **at least 6mm** long if you want to shorten it.

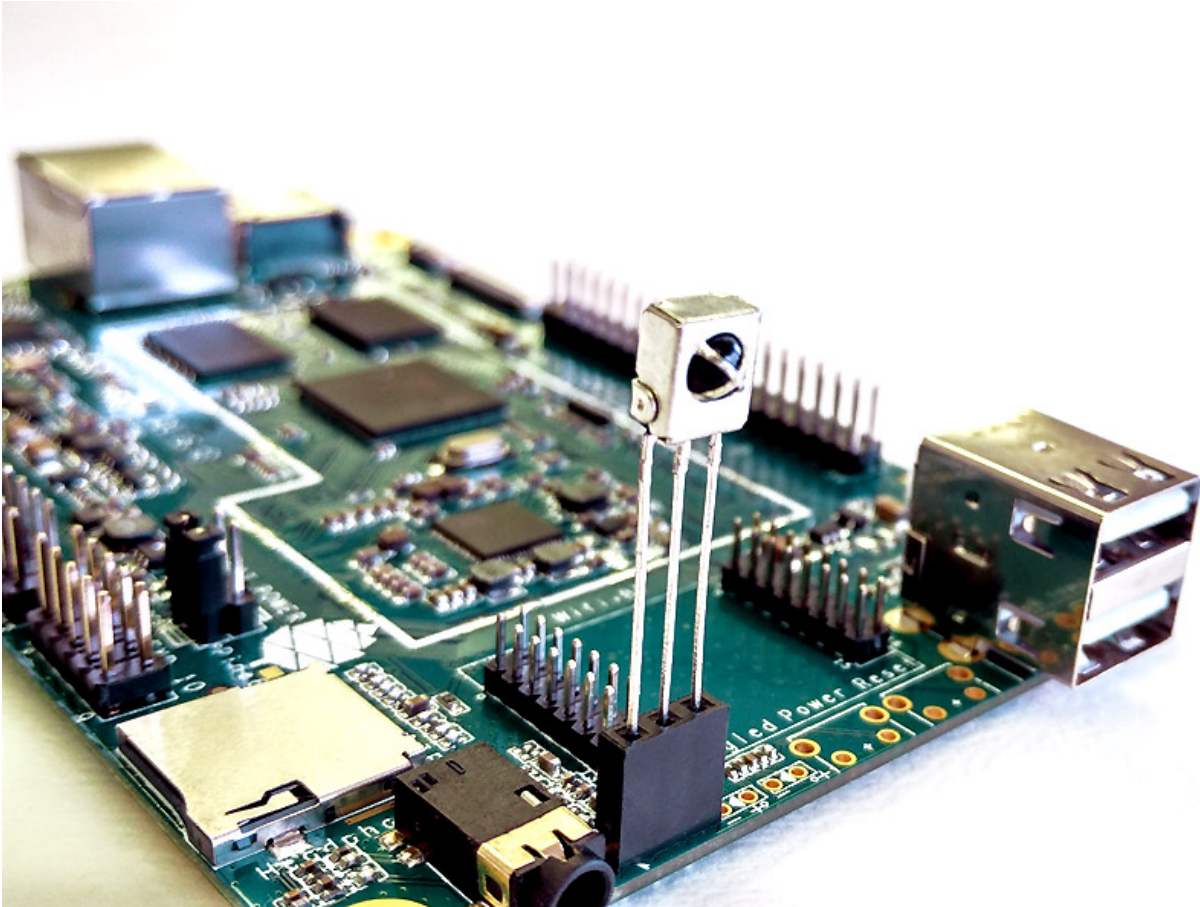

Congratulations! You have successfully installed the IR Receiver for Remote Controller to PINE A64!

