


Installing RTC Backup Battery CR2032 to PINE A64

Description

This is the installation of RTC Backup Battery CR2030 to PINE A64

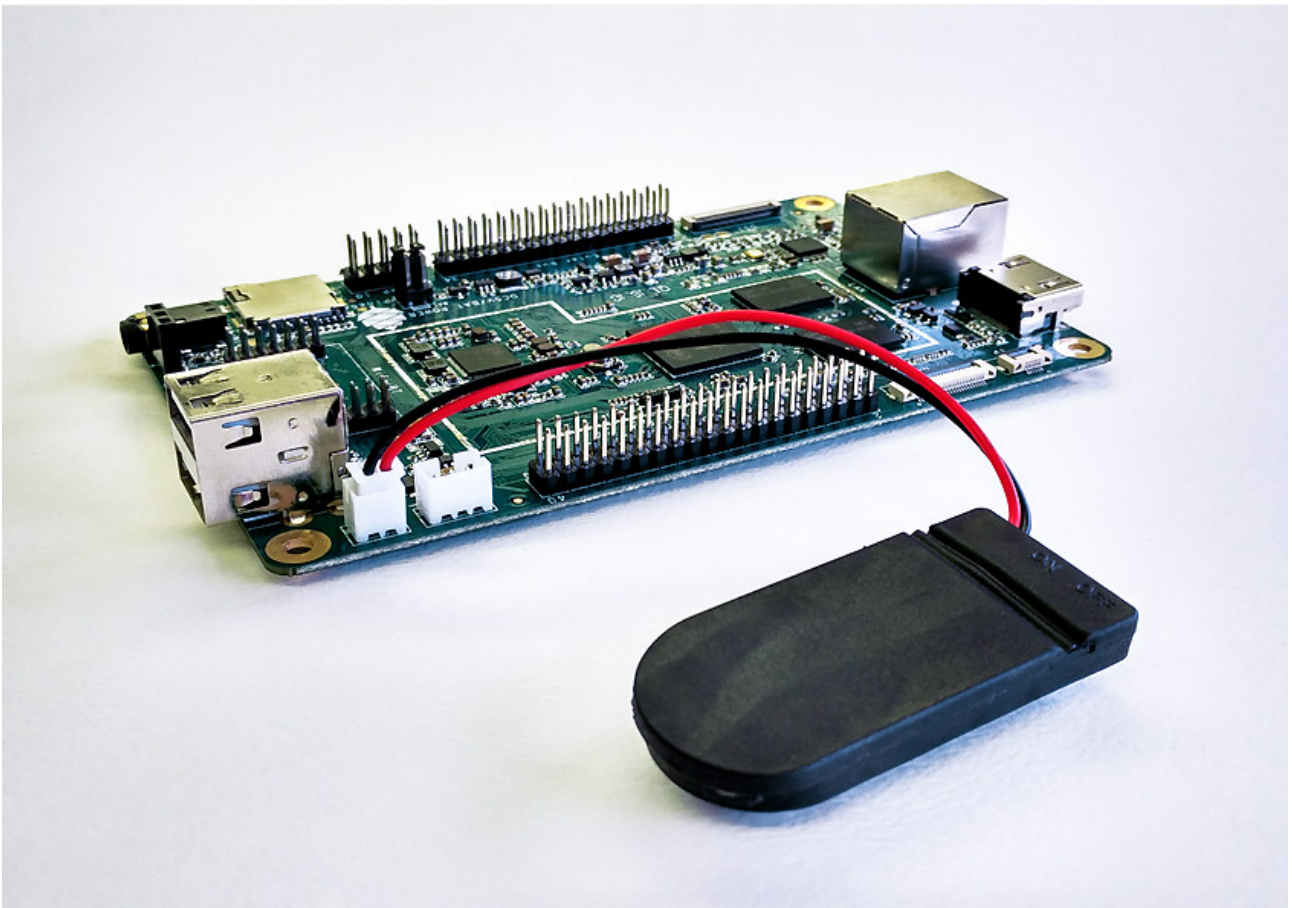

■ Packaging and Contents




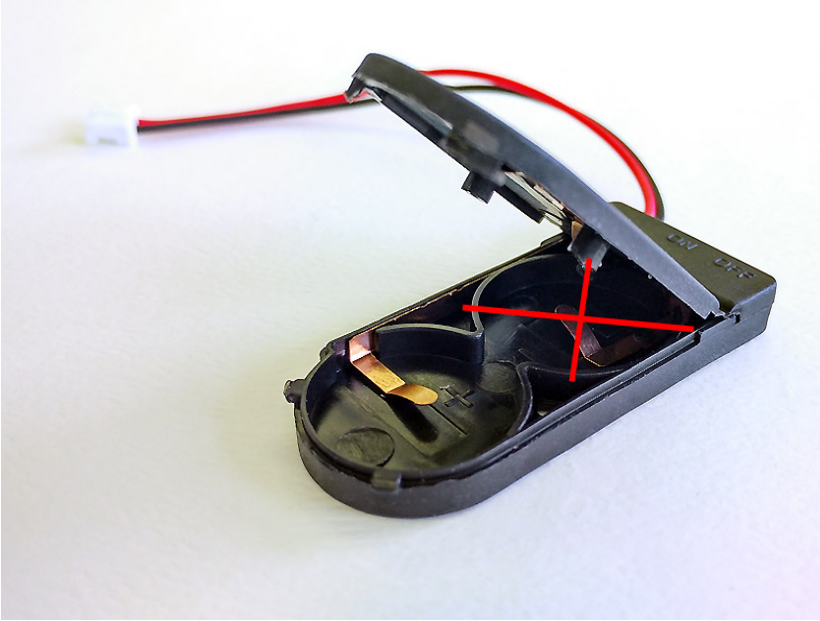
Package Contents:

1 x RTC Backup Battery Holder

Installing RTC Backup Battery CR2032 into RTC Backup Battery Holder

STEP 01 Unlatch the battery compartment cover of RTC Backup Battery Holder


 *Make sure that you do not put your battery in the inner compartment.*



STEP 02 Get a CR2032 3V Battery from a retail shop (to be inserted into RTC Backup Battery Holder)



STEP 03 Insert the CR2032 Battery into the outer RTC Backup Battery compartments. Make sure the positive ends of the battery is facing down

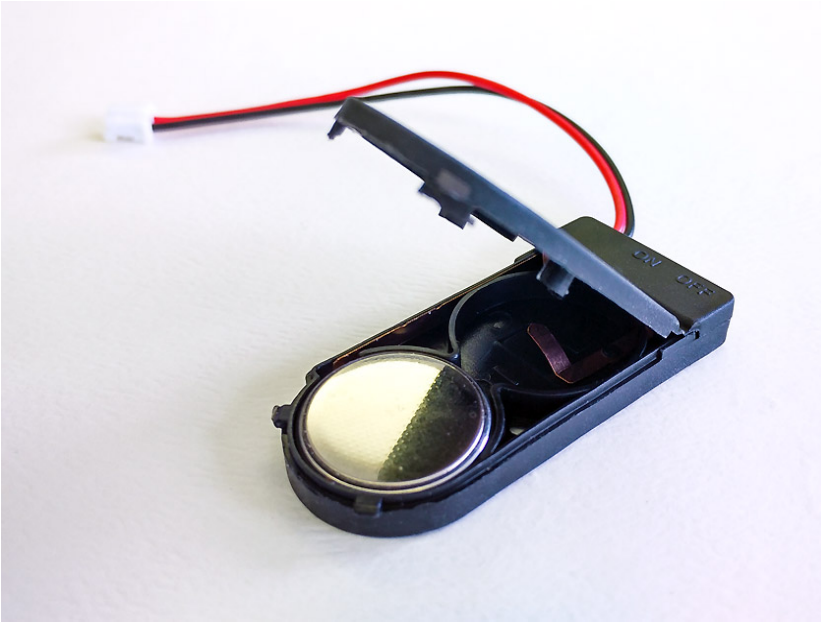

STEP 04 Tighten the battery compartment cover of RTC Backup Battery Holder. Connect the RTC Backup Battery Holder to RTC port on PINE A64



Congratulations! You have successfully installed the RTC Backup Battery CR2032 to PINE A64. Turn on the switch on the RTC Backup Battery Holder to start now!

