


Removing battery from the 11.6" Pinebook

Description

This is a step-by-step guide to remove the battery from your 11.6" Pinebook.

 *If your 11.6" Pinebook is plugged in, either unplug it or disconnect the power cable.*

STEP 01 Turn your 11.6" Pinebook over so the bottom is facing up then remove the ten screws.

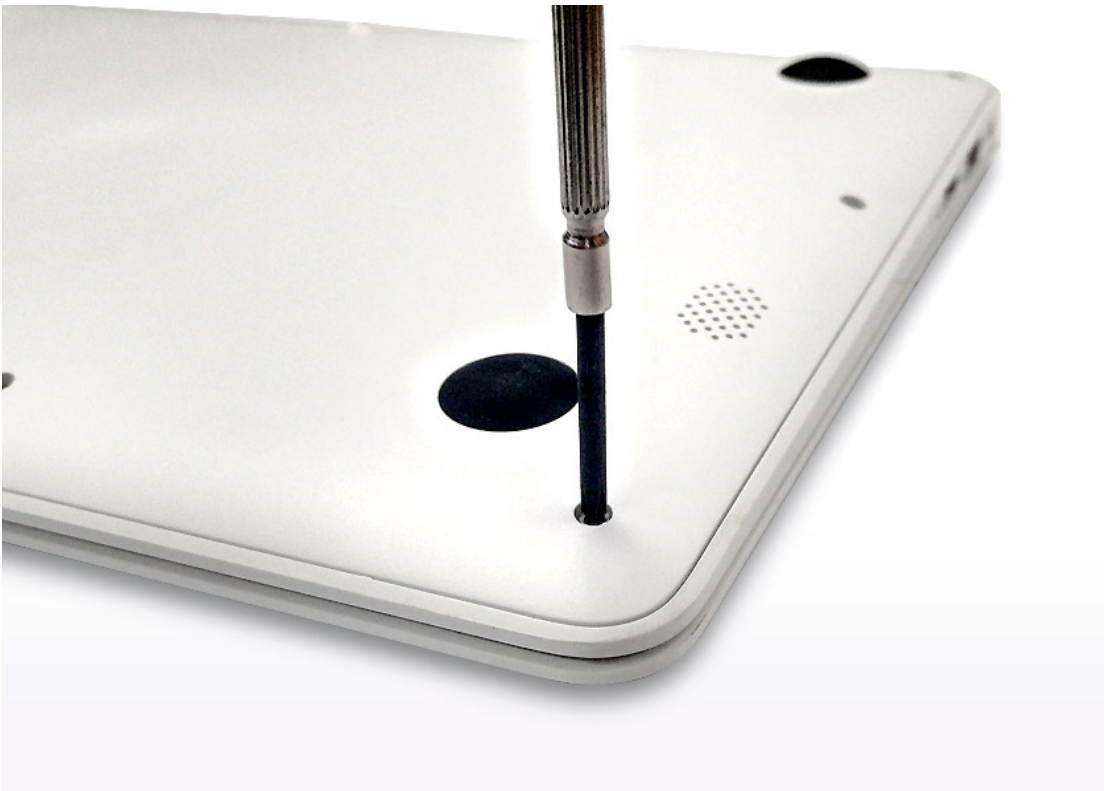


STEP 02 Remove the back cover of your 11.6" Pinebook with a flat-head screw driver.



STEP 03 Remove the screw that secure the battery in place.



STEP 04 Release the connector of the battery from the adhesive tape and take the battery out gently with the tips of your fingers.

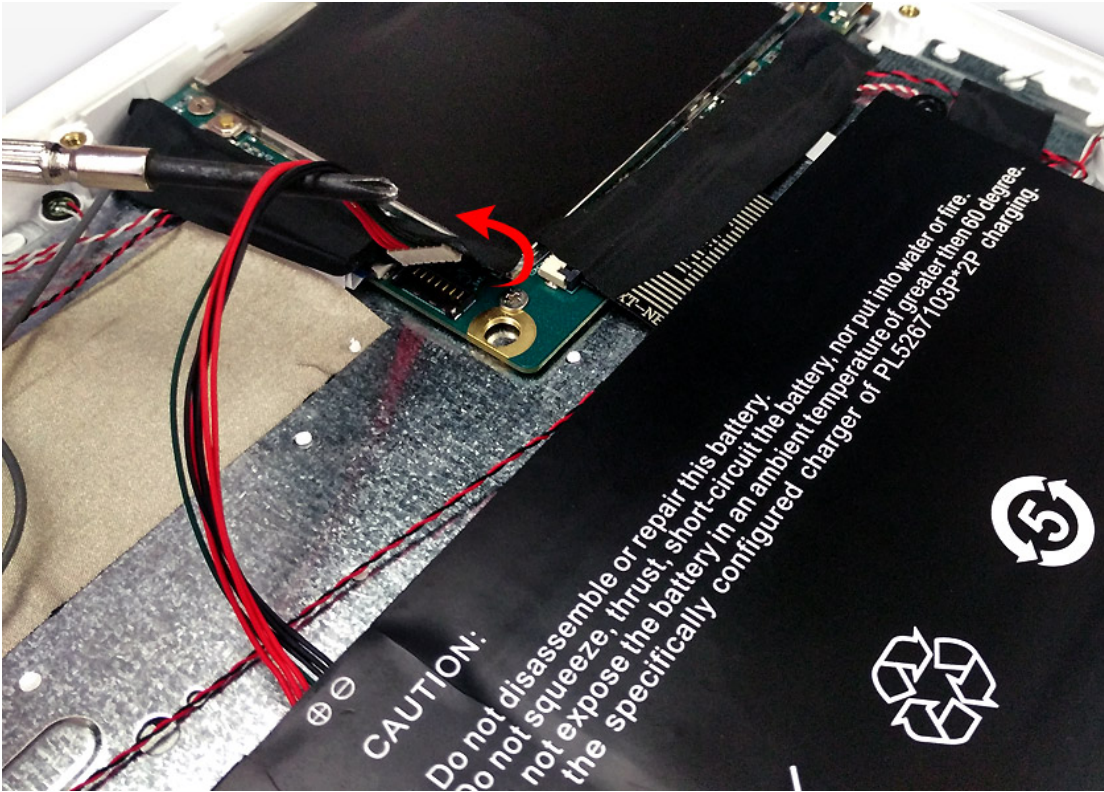

Congratulations! The battery has been successfully removed from the 11.6" Pinebook!

