


Removing Screen from the Body of 14" Pinebook


Description

This is a guide to remove the screen panel from the body of 14" Pinebook.


STEP 01 Remove the tape that attach on the antenna.

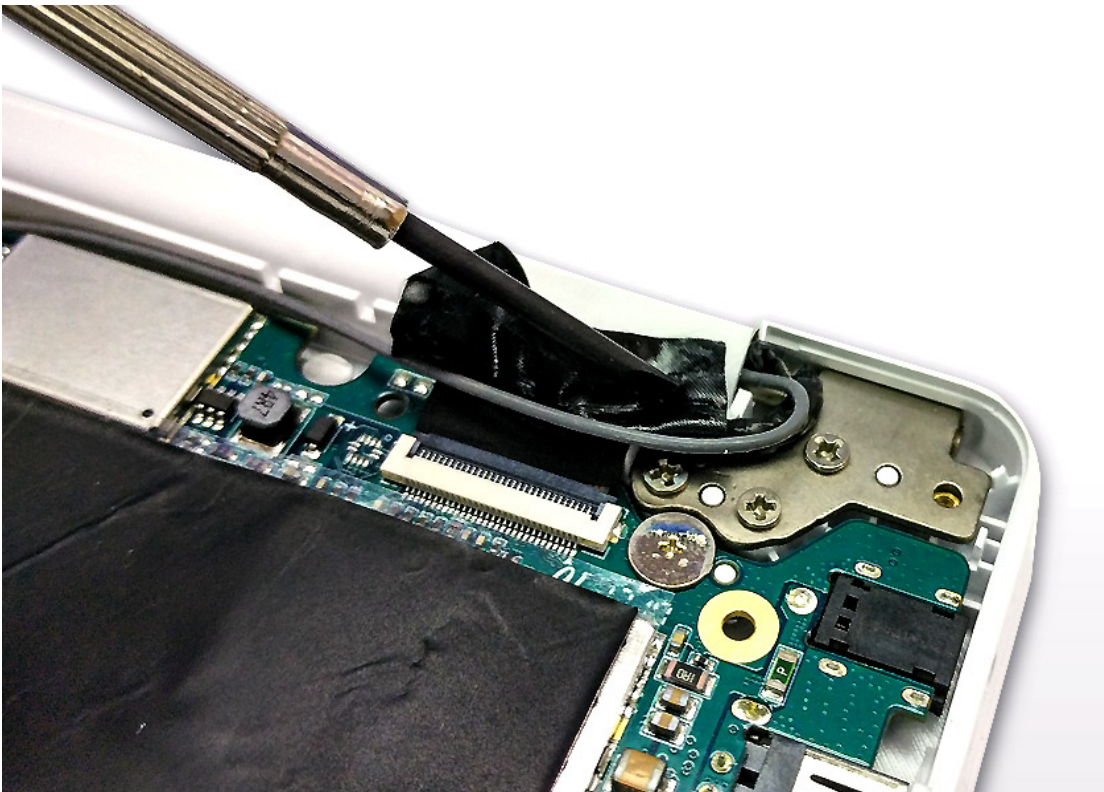


STEP 02 Unlatch the retaining flap to free the antenna.

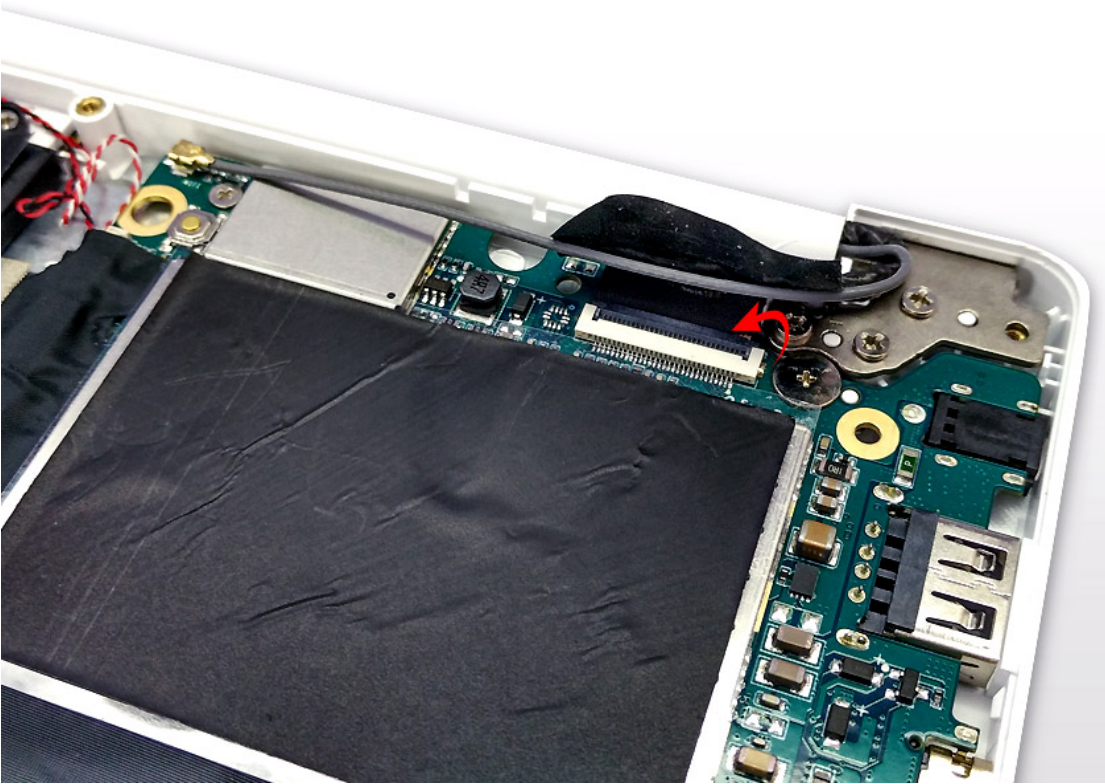

STEP 03 Gently pull out the antenna to disconnect it from the antenna connector.

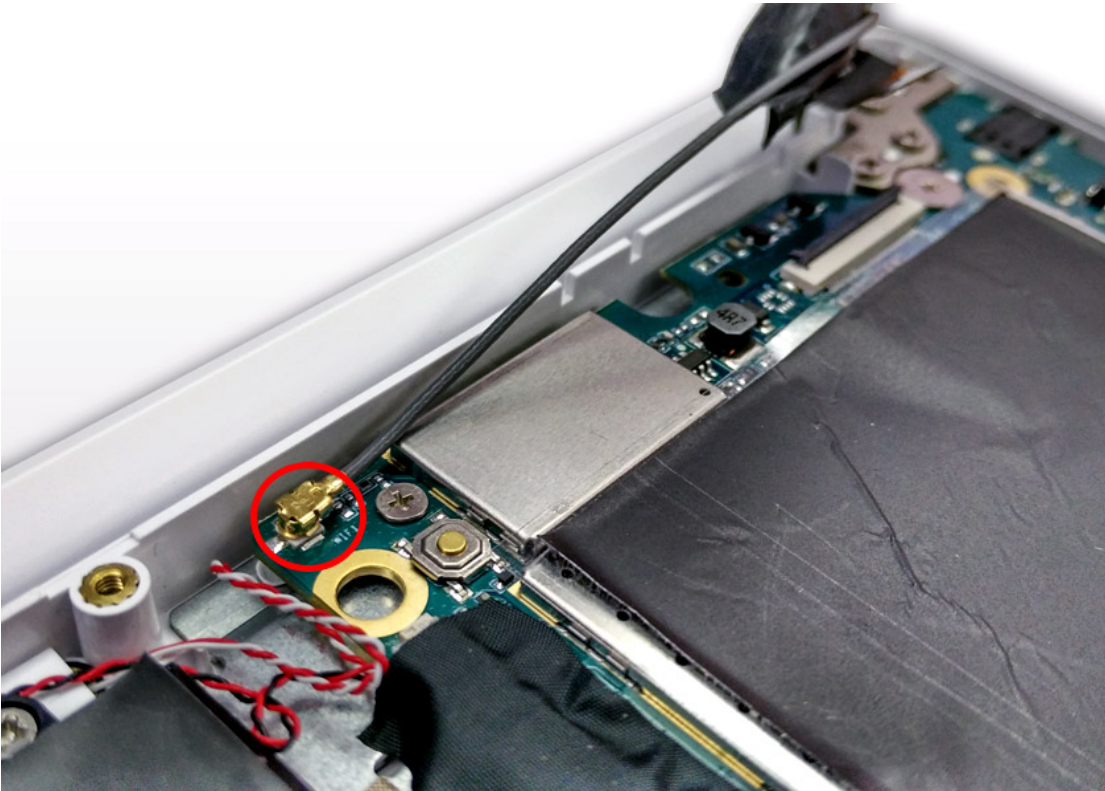

STEP 04 Undo the hinges on both sides and the screen connector located on the main board. The hinges are held in place with Philips screws.

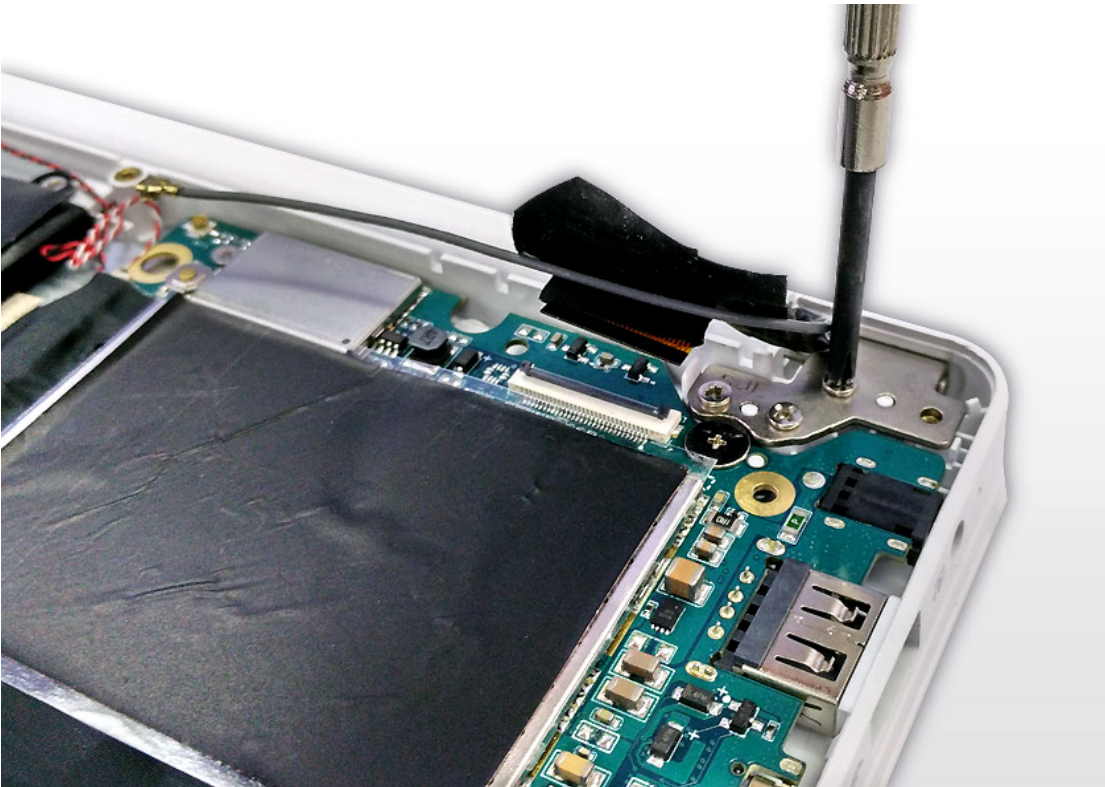



STEP 05 Bend the Pinebook to a 90° angle to separate the screen and the body.

Congratulations! You have now detached the 14" Pinebook LCD Screen with the body.

